



#### Input error

or Cancel the input.  
 PIN Re-input PIN.

#### Invalid PIN input

Caution! The input is blocked for one minute after an invalid PIN has been input four times.

#### Panic alarm

This key combination can be programmed as a panic alarm. Both keys must be simultaneously pressed and held for 2 sec. to trigger.

#### Test of displays

 
All LEDs and the bleeper can be activated by pressing these keys simultaneously.

The right to make technical changes to the described equipment without prior notice is reserved.

## SIEMENS

LED remote keypad  
SAK 21 UK

### Operating manual

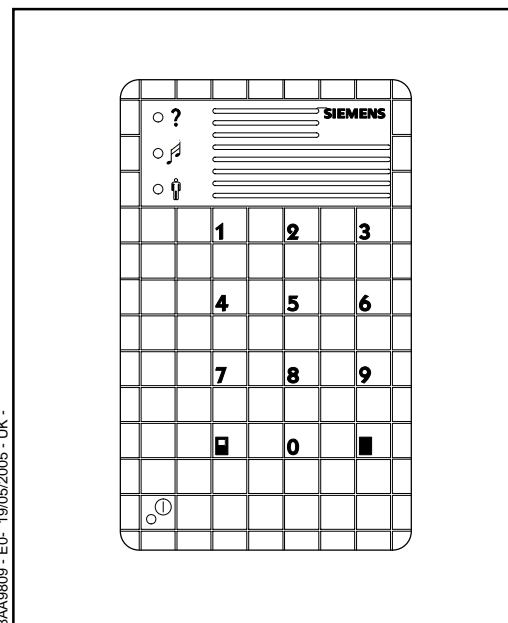



The LED displays reflect the state of the selected or assigned ward.

**LED „ ? “ (orange)**

Comes on when a sensor signal is present, alarms are not reset in the memory or a fault is present. Query the cause using the LCD remote keypad.

**LED „ “ Bleeper active (orange)**

Comes on when the bleeper is active.

**LED „ “ (green)**

Comes on when the ward is unset.  
 Flashes when the ward is "Part set".  
 Dark when the ward is "Full Set".

**LED „ “ (green)**

Comes on when the system is operating.

The keyboard contains the following function keys in addition to numerical keys 0 to 9.

- Full Set
- Part Set

**Switch on ward**

- PIN Input PIN
- Part Set
- Full Set

Beeper	State
Continuous tone	Delay time running
..	Delay with sensor triggered
10 sec.	After delay, Ward not set
3 sec. cont. tone	All o.k., ward set
3 times	Ward not set
6 times	Ward not set

If the ward cannot be set, query the cause using the LCD remote keypad.

**Unset ward**

- PIN Input PIN

A short sounds and the ward is unset. The "" LED comes on.